



visocolor® ECO Mangan

Manganese / Manganèse / Manganese

Messbereich / Range / Domaine de mesure / Rango
0.1 – 1.5 mg/L Mn

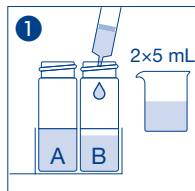


Probe
Sample
Echantillon
Muestra

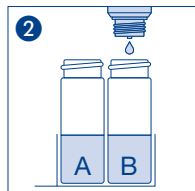


5 Δ MN-1



Schütteln
Shake
Agiter
Agitar

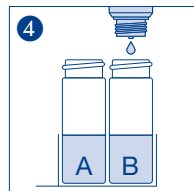


7 Δ Mn-2

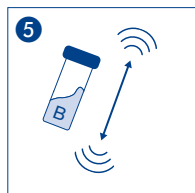


Schütteln
Shake
Agiter
Agitar



Warten
Wait
Attendre
Espere

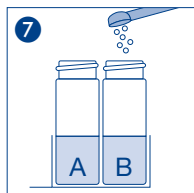


1 Δ Mn-3

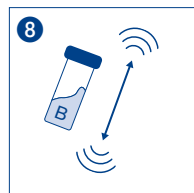

Schütteln
Shake
Agiter
Agitar



Warten
Wait
Attendre
Espere

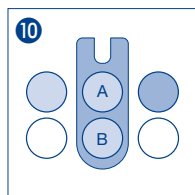

Messung
Measurement
Mesure
Medición

Geeignet für Meerwasser
Suitable for seawater
Convient à l'eau de mer
Adecuado para el agua de mar