


visicolor® ECO Calcium


Calcium / Calcium / Calcio

Messbereich / Range / Domaine de mesure / Rango


1 Δ Δ 5 mg/L Ca²⁺

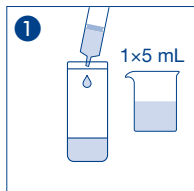


Probe
Sample
Echantillon
Muestra

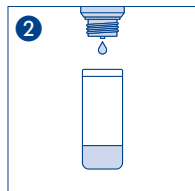


2 Δ Ca-1

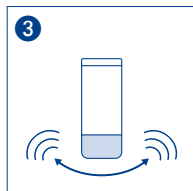

Umschwenken
Shake gently
Secouer légèrement
Mezclar volteándolo

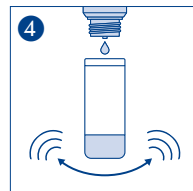

Δ Ca-2
bis Farbumschlag
till coloration
jusque inversion de couleur
hasta cambio de color

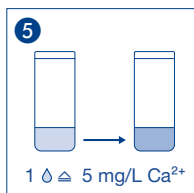

1 Δ Δ 5 mg/L Ca²⁺

rot \rightarrow blau
red \rightarrow blue
rouge \rightarrow bleu
rojo \rightarrow azul

Geeignet für Meerwasser nach Verdünnung 1 + 4
Suitable for sea water after dilution 1 + 4
Convient à l'eau de mer après dilution 1 + 4
Adecuado para el agua de mar tras su dilución 1 + 4

