



# visocolor® ECO Ammonium 3

## Ammonium 3 / Ammonium 3 / Amonio 3

Messbereich / Range / Domaine de mesure / Rango  
0.2–3 mg/L NH<sub>4</sub><sup>+</sup>

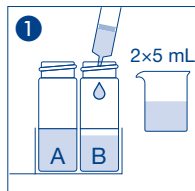


1  
Probe  
Sample  
Echantillon  
Muestra

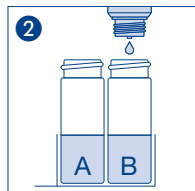

2  
10 Δ NH<sub>4</sub>-1



3  
Schütteln  
Shake  
Agiter  
Agitar

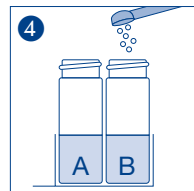


4  
1 Δ NH<sub>4</sub>-2




5  
Schütteln  
Shake  
Agiter  
Agitar




6  
Warten  
Wait  
Attendre  
Espere

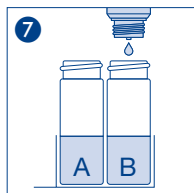


7  
4 Δ NH<sub>4</sub>-3

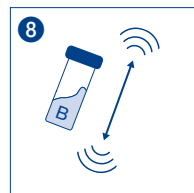

8  
Schütteln  
Shake  
Agiter  
Agitar

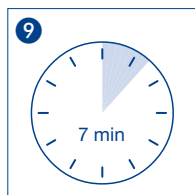

9  
Warten  
Wait  
Attendre  
Espere

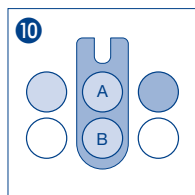

10  
Messung  
Measurement  
Mesure  
Medición

Geeignet für Meerwasser nach Verdünnung 1 + 9  
Suitable for sea water after dilution 1 + 9  
Convient à l'eau de mer après dilution 1 + 9  
Adecuado para el agua de mar tras su dilución 1 + 9



MACHEREY-NAGEL  
www.mn-net.com