



visicolor® ECO Chrom(VI)

Chromium(VI) / Chrome(VI) / Cromo(VI)

Messbereich / Range / Domaine de mesure / Rango
0.02 – 0.50 mg/L Cr(VI)

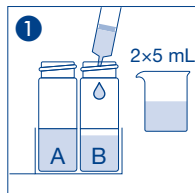


Probe
Sample
Echantillon
Muestra

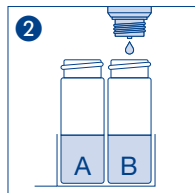


5 ♢ Cr-1



Schütteln
Shake
Agiter
Agitar

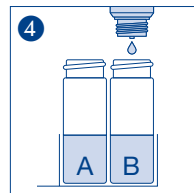


5 ♢ Cr-2

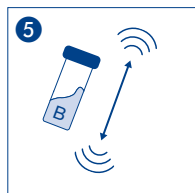

Schütteln
Shake
Agiter
Agitar



Warten
Wait
Attendre
Espere

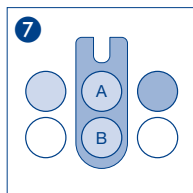

Messung
Measurement
Mesure
Medición

Geeignet für Meerwasser
Suitable for seawater
Convient à l'eau de mer
Adecuado para el agua de mar