


# visicolor® ECO Sulfit


Sulphite / Sulfite / Sulfito

Messbereich / Range / Domaine de mesure / Rango


1  $\Delta$   $\triangleq$  1 mg/L  $\text{SO}_3^{2-}$

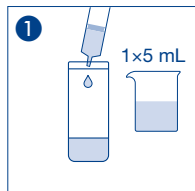


1  
Probe  
Sample  
Echantillon  
Muestra

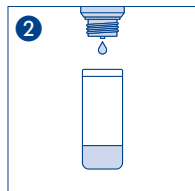


2  
5  $\Delta$   $\text{SO}_3^{-1}$

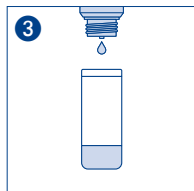


3  
5  $\Delta$   $\text{SO}_3^{-2}$

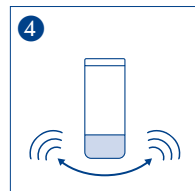

4  
Umschwenken  
Shake gently  
Secouer légèrement  
Mezclar volteándolo

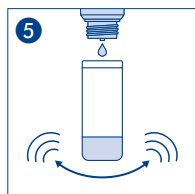

5  
 $\Delta$   $\text{SO}_3^{-3}$   
bis Farbumschlag  
till coloration  
jusque inversion de couleur  
hasta cambio de color

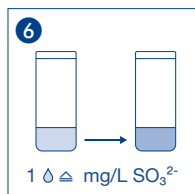

6  
farblos  $\longrightarrow$  blau  
colourless  $\longrightarrow$  blue  
incolore  $\longrightarrow$  bleu  
incolores  $\longrightarrow$  azul

Geeignet für Meerwasser  
Suitable for seawater  
Convient à l'eau de mer  
Adecuado para el agua de mar