


visicolor[®] ECO Chlordioxid




Chlorine dioxide / Dioxyde de chlore / Cloro dióxido

| Method(e) / Método | | PF-3 Pool/ Drinking Water 530 nm | PF-12 540 nm | PF-12 ^{Plus} 540 nm | Advance 530 nm |
|--------------------|---------------------------------|--|-----------------|---------------------------------|-------------------|
| 5211 | 0.20–3.80 mg/L ClO ₂ | ■ | ■ | ■ | ■ |
| 5211 | 0.10–3.80 mg/L ClO ₂ | ■ | | | |

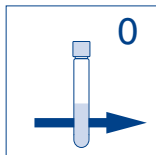


Null mit Probe
Blank with sample
Blanc avec échantillon
En blanco con muestra


Nicht geeignet für Meerwasser
Not suitable for seawater
Ne convient pas à l'eau de mer
No es adecuado para el agua de mar

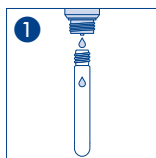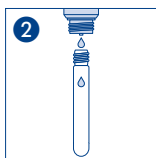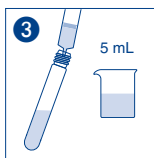3 ∆ ClO₂-23 ∆ ClO₂-3


Probe
Sample
Echantillon
Muestra

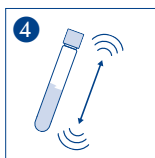

Schütteln
Shake
Agiter
Agitar

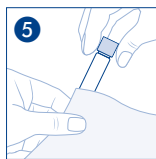

Säubern
Clean
Nettoyer
Limpiar

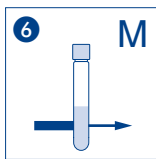


Messung
Measurement
Mesure
Medición

visicolor® ECO Chlordioxid

Chlorine dioxide / Dioxyde de chlore / Cloro dióxido


Bei einer Störung durch Chlor: / In presence of chlorine interferences: / En cas d'interférence avec le chlore: / En caso de interferencia de cloro:

| Method(e) / Método | PF-3 Pool / Drinking Water | PF-12 | PF-12 ^{Plus} | Advance |
|--------------------------------------|----------------------------|--------|-----------------------|---------|
| 5211 0.20–3.80 mg/L ClO ₂ | 530 nm | 540 nm | 540 nm | 530 nm |
| 5211 0.10–3.80 mg/L ClO ₂ | ■ | ■ | ■ | ■ |

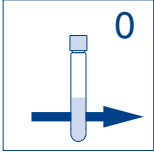


Null mit Probe
Blank with sample
Blanc avec échantillon
En blanco con muestra

Nicht geeignet für Meerwasser
Not suitable for seawater
Ne convient pas à l'eau de mer
No es adecuado para el agua de mar

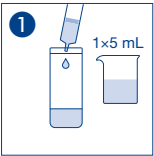


Probe
Sample
Echantillon
Muestra

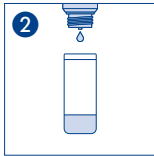


2 ∆ ClO₂-1




Schütteln
Shake
Agiter
Agitar

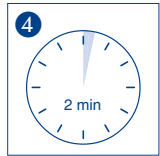


Warten
Wait
Attendre
Espere

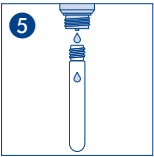


3 ∆ ClO₂-2

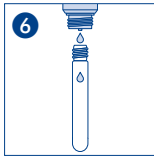


3 ∆ ClO₂-3

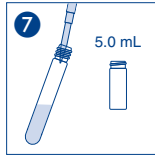


Probe
Sample
Echantillon
Muestra

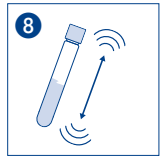

Schütteln
Shake
Agiter
Agitar

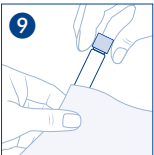

Säubern
Clean
Nettoyer
Limpiar

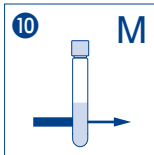

Messung
Measurement
Mesure
Medición