



visocolor® ECO Sulfid

Sulphide / Sulfure / Sulfuro


Messbereich / Range / Domaine de mesure / Rango
0.1 – 0.8 mg/L S²⁻

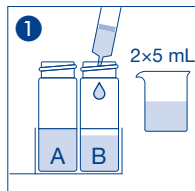

Probe
Sample
Echantillon
Muestra

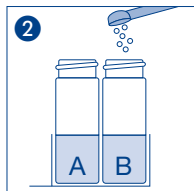


1 S-1

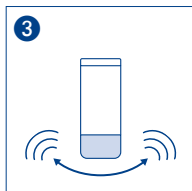


Umschwenken
Shake gently
Secouer légèrement
Mezclar volteándolo



Warten
Wait
Attendre
Espere

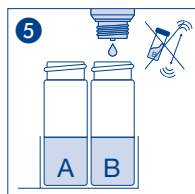


5 S-2

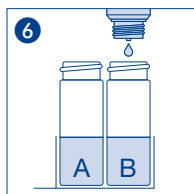


5 S-3



Schütteln
Shake
Agiter
Agitar

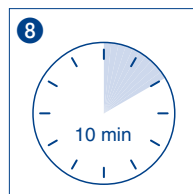

Warten
Wait
Attendre
Espere

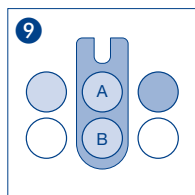

Messung
Measurement
Mesure
Medición

Geeignet für Meerwasser
Suitable for seawater
Convient à l'eau de mer
Adecuado para el agua de mar